

# IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

**WARNING:** Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

**CAUTION:** When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save

for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

## EXTERIOR HARBOR SCONCE W/ SOLID TOP PLATE

[A] Remove Top Plate by unscrewing the visible flat head screws. Remove the Lens by unscrewing two flat head screws and carefully lift the Lens out of the Fixture Housing.

[B] Remove the Lens Bracket and the Lamp Pan by unscrewing the locknuts and carefully lift the Lens Bracket and the Lamp Pan out of the Fixture Housing.



[C] Unscrew the two Knurl Nuts and remove the Mounting Cross Bar. Secure the Mounting Cross Bar to a junction box with screws (by others.) Place the Fixture housing over the Cross Bar and secure with the two Knurl Nuts. NOTE: Auxiliary holes located on the Fixture Housing may be used to mount the Fixture Housing in place of, or in addition to, the Mounting Cross Bar.

[D] Place the Lamp Pan within the Fixture Housing and make the necessary wire connections. When the wiring is complete, secure the Lamp pan to the Fixture Housing with the lock nuts. Replace the Lens Bracket.

[E] Replace the Lens and Top Plate.

### TO ACCESS LAMPS AFTER INSTALLATION:

Remove the Top Plate from the Fixture Housing by unscrewing the flat head screws. Remove the Lens by unscrewing two flat head screws. Now the Lamp can be serviced. Clean the Lens before replacing. Replace the Lens and Top Plate.

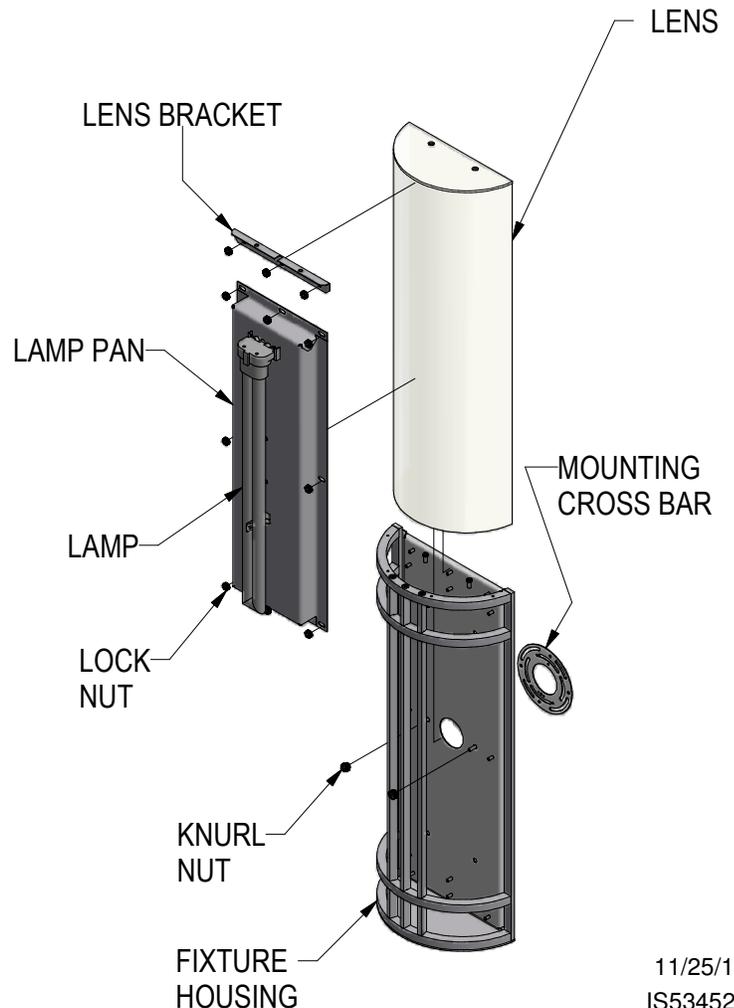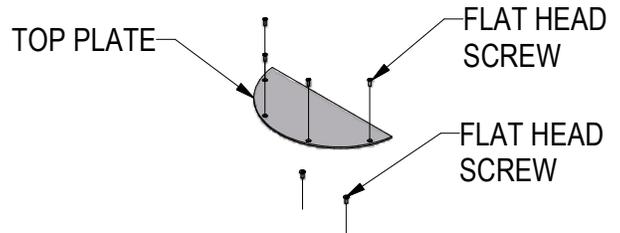

11/25/13  
IS53452X