

IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

WARNING: Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

CAUTION: When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save

for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

 
 
 
These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

ECHO Shapes - Wall Mount

Note: Size and shape of fixture may vary.

WALL MOUNT INSTRUCTIONS

1. Mount wall plate over the octagonal junction box. Auxillary mounting required for 2' wide fixtures.
2. While using the support cable to hold the fixture, make all electrical connections per local codes.
3. Apply silicone to the three flanges of the back box.
4. Lift the fixture up and hook the top edge of the back box to the top flange of the wall plate. (be carefull not to pinch any wires)
5. Swing the fixture down against the wall.
6. Secure the fixture by tightening the two set screws located on the bottom of the back box.
7. Inspect the water tight seal between the fixture and the wall. Repair or add silicone as needed.

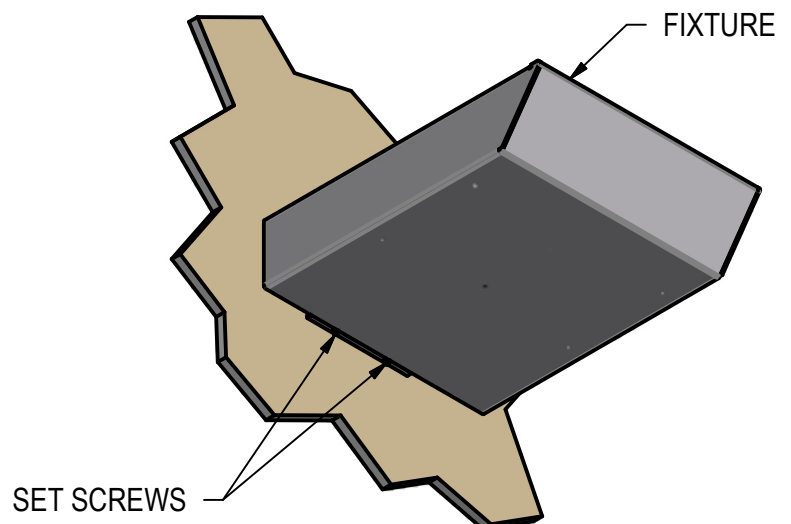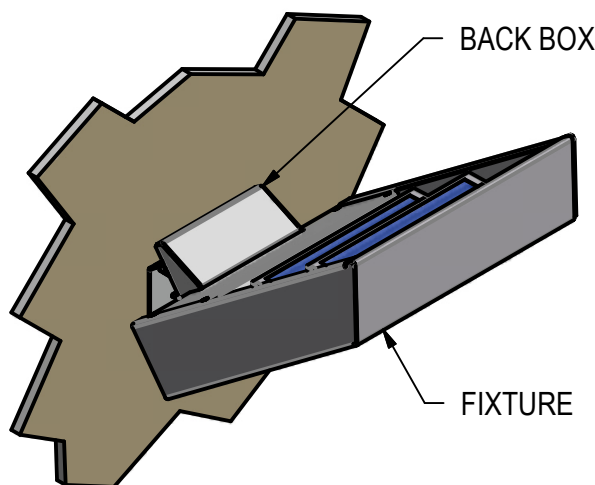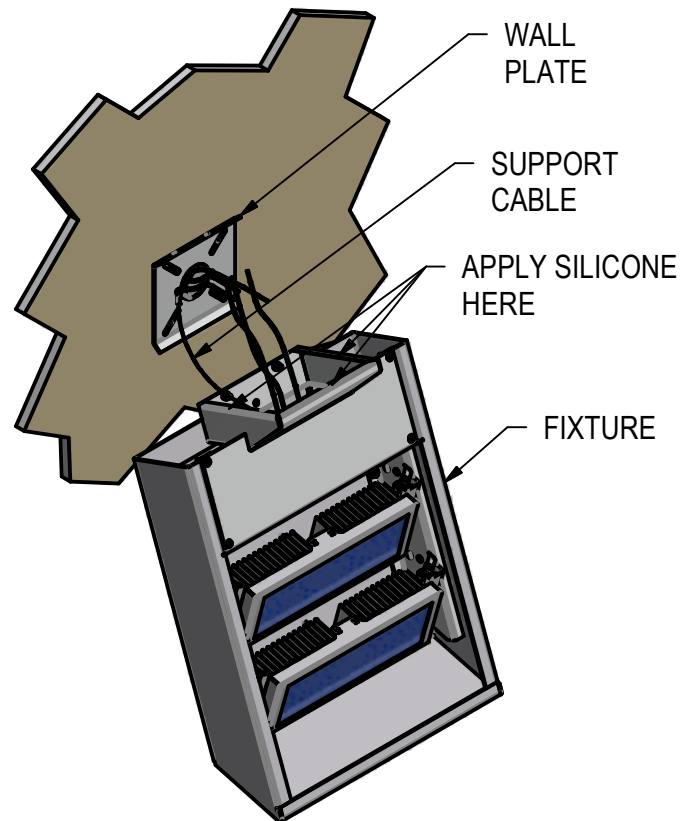

9/29/17
IS99813X