

IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS


WARNING: Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

CAUTION: When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save

for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.


These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

ECHO EXPANSE HORIZONTAL CANTILEVER MOUNT

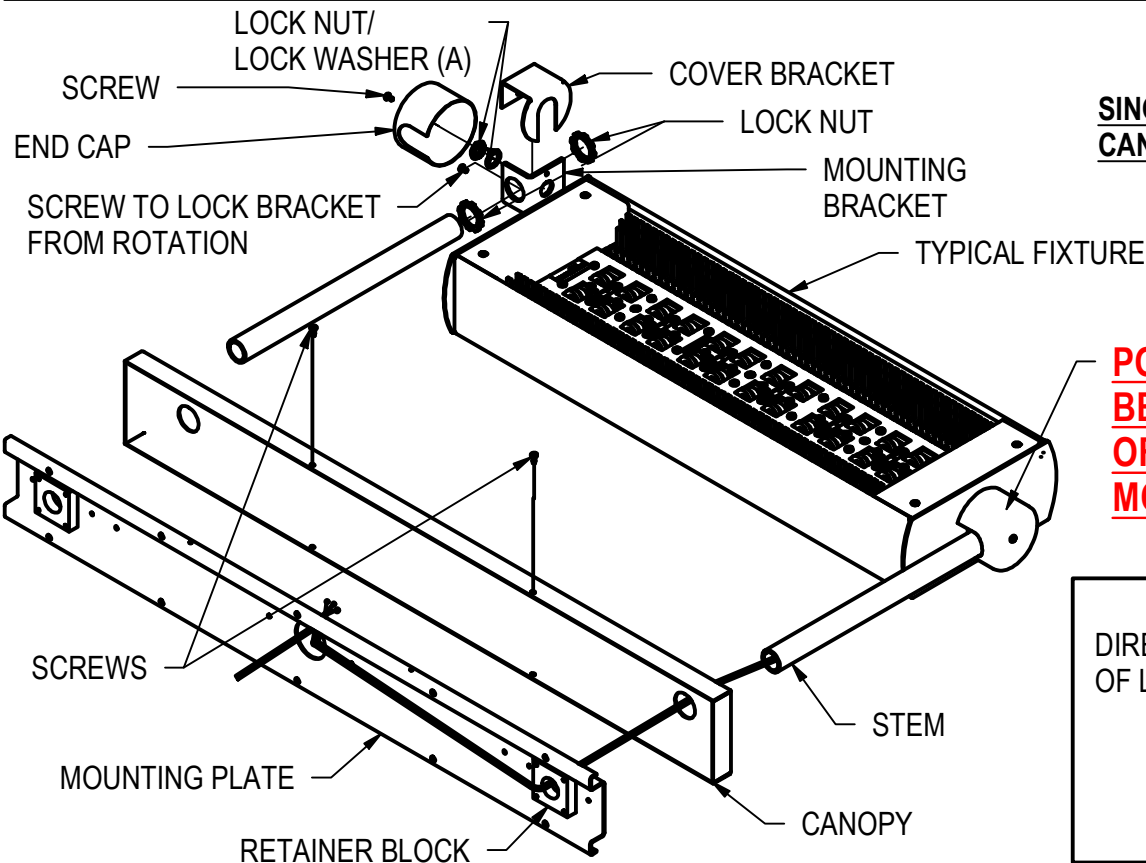

SINGLE CANOPY


POWER WILL ALWAYS BE ON THE LEFT SIDE OF FIXTURE AS MOUNTED TO THE WALL

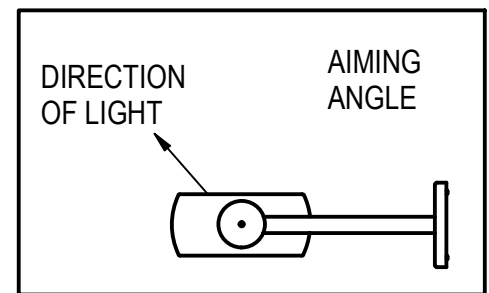

INSTALLATION:

1. USE MOUNTING PLATE TO LOCATE ANCHOR HOLES BY POSITIONING CENTER OF MOUNTING PLATE OVER JUNCTION BOX (BY OTHERS). MOUNT PLATE TO MOUNTING SURFACE. SUPPORT BRACKET IS SUPPLIED WITH AUX. MOUNTING HOLES THAT MUST BE USED TO SUPPORT FIXTURE.
2. FEED LEAD WIRES THROUGH PARTS AS SHOWN AND ASSEMBLE FIXTURE.
3. ATTACH FIXTURE ASSEMBLY TO MOUNTING PLATE AND SECURE WITH LOCK NUTS. MAKE ALL ELECTRICAL CONNECTIONS TO FIXTURE PER CODE.
4. TO SECURE CANOPY, SLIDE CANOPY UP STEMS TO MOUNTING SURFACE USING SCREWS PROVIDED. SECURE TO MOUNTING PLATE(SINGLE CANOPY).
5. ATTACH END CAPS WITH SCREWS PROVIDED.
6. FIXTURE AIMING ANGLE TO BE 0 DEGREES.

FOR CUSTOM AIMING, LOOSEN LOCKING NUTS (A), AIM FIXTURE, AND RE-TIGHTEN SCREWS.

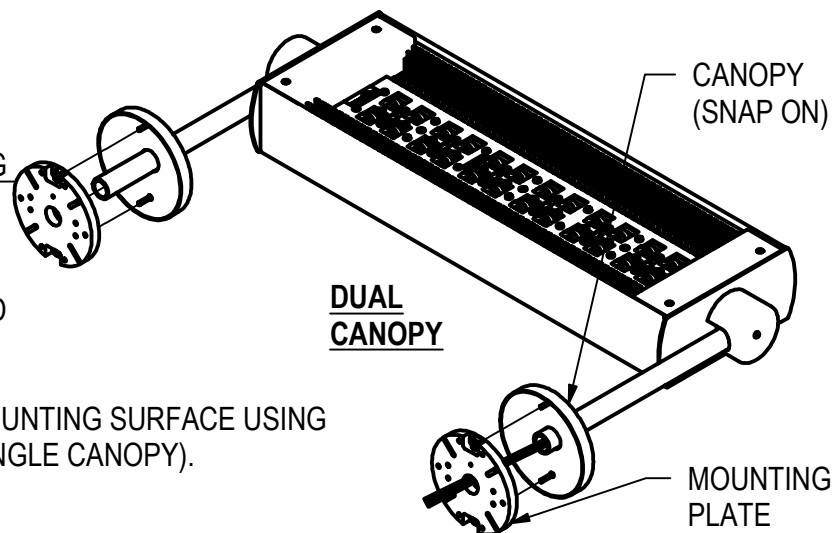

DUAL CANOPY

4/5/22
IS111421X