

IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

WARNING: Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

CAUTION: When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save


for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that the power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

ECHO BLADE MICRO MAX - INTEGRAL DRIVER - YOKE INSTALLATION

INSTALLATION:

1. ATTACH WALL PLATE TO JUNCTION BOX WITH SCREWS (BY OTHERS).
2. CONNECT SUPPLY WIRES IN ACCORDANCE WITH STATE AND LOCAL CODE.
3. LIFT FIXTURE UP AND HOOK ON TOP EDGE OF WALL PLATE.
4. TIGHTEN SET SCREW LOCATED ON BOTTOM TO LOCK FIXTURE ONTO WALL PLATE.

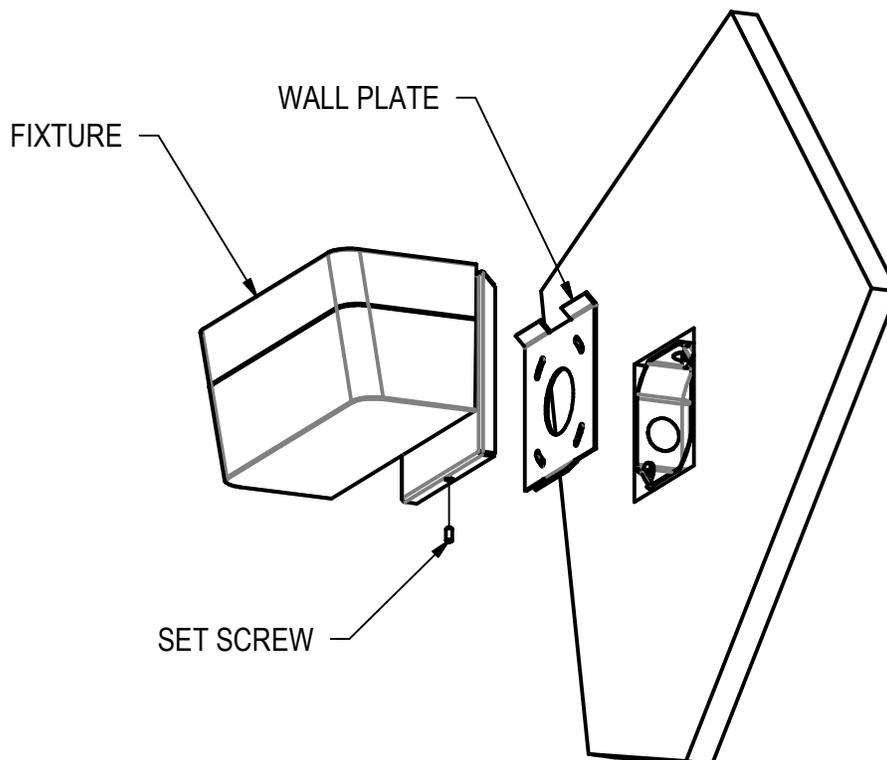

1/26/24
IS116676X

IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS


WARNING: Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

CAUTION: When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save

for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that the power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

ECHO BLADE MICRO MAX - INTEGRAL DRIVER - YOKE INSTALLATION

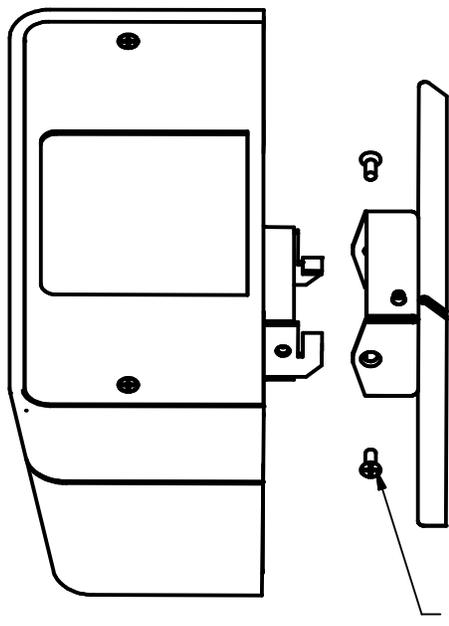


NOTE: TO MOUNT FIXTURE IN DIRECT ORIENTATION REMOVE YOKE SCREWS, AND FLIP FIXTURE 180 DEGREES BEFORE REINSTALLING SCREWS.

TO ADJUST ANGLE OF FIXTURE:

1. TURN OUT LOWER SET SCREW ALL THE WAY.
2. ADJUST UPPER SET SCREW UNTIL THE DESIRED ANGLE IS SET.
3. TIGHTEN LOWER SET SCREW TO LOCK INTO POSITION, AND RETIGHTEN YOKE SCREWS IF NECESSARY.

YOKE ADJUSTMENT SET SCREWS

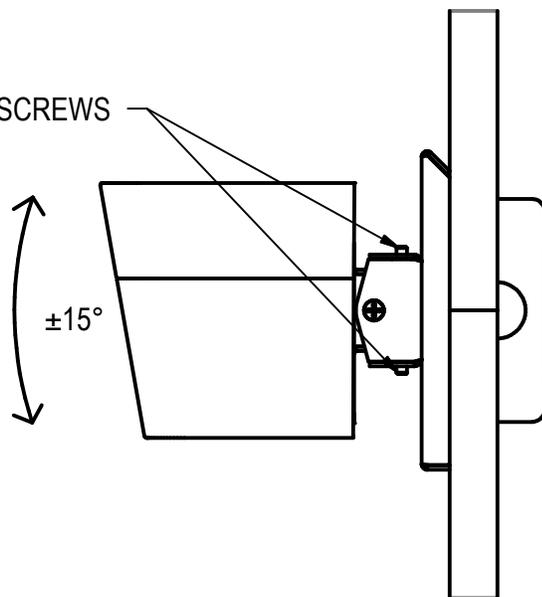

1/26/24
IS116676X