

IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

WARNING: Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

CAUTION: When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save



for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

SURFACE MOUNT LINEAR WALL SCONCE - DAMP LOCATION

INSTALLATION INSTRUCTIONS:

1. SECURE FIXTURE TO WALL AT J-BOX AND (4) AUXILIARY MOUNTING HOLES, (HARDWARE BY OTHERS)
2. MAKE CONNECTION PER CODE.
3. SECURE J-BOX WIRE SPLICE COVER TO HOUSING WITH PROVIDED SCREWS. (SEE HARDWARE BAG)
4. INSTALL LAMP
5. SECURE FACE PLATE TO HOUSING BY LINING UP BALL STUDS ON BACK OF FACE PLATE TO SUPPORT CLIPS ON HOUSING AND APPLYING PRESSURE TO FACE PLATE.
NOTE: CHECK FACE PLATE BY EACH STUD TO CONFIRM TIGHT CLOSURE.

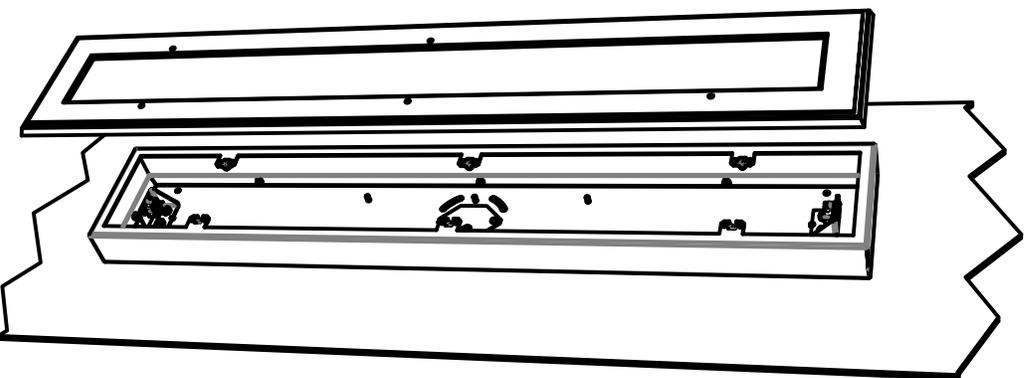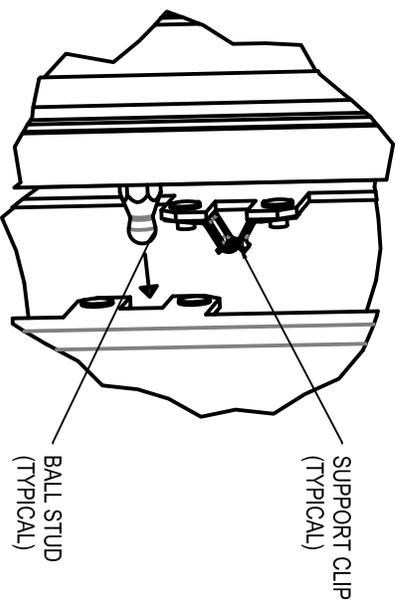

12/21/13

ISS8921X

ADVENT™

A BRAND OF SPLIGHTING

Tel (262)-242-1420 FAX: (262)-242-6414

contact@specadvent.com