

IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

WARNING: Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

CAUTION: When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save



for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

LINEAR - SURFACE MOUNT WALL SCONCE - WET LOCATION

INSTALLATION INSTRUCTIONS:

1. SECURE FIXTURE TO WALL AT J-BOX AND (4) AUXILIARY MOUNTING HOLES. (HARDWARE BY OTHERS)
2. MAKE CONNECTION PER CODE.
3. SECURE J-BOX WIRE SPLICE COVER TO HOUSING WITH PROVIDED SCREWS. (SEE HARDWARE BAG)
4. **WARNING: THIS STEP IS CRITICAL TO KEEP WATER OUT OF FIXTURE**
PROVIDE A GENEROUS BEAD OF SILICONE BETWEEN THE FIXTURE AND WALL AROUND THE ENTIRE PERIMETER OF THE FIXTURE, COMPLETELY FILLING ANY GAPS. (SEE DETAIL BELOW)
5. INSTALL LAMP
6. SECURE FACE PLATE TO HOUSING WITH PROVIDED STAINLESS STEEL SCREWS AND RUBBER WASHERS.

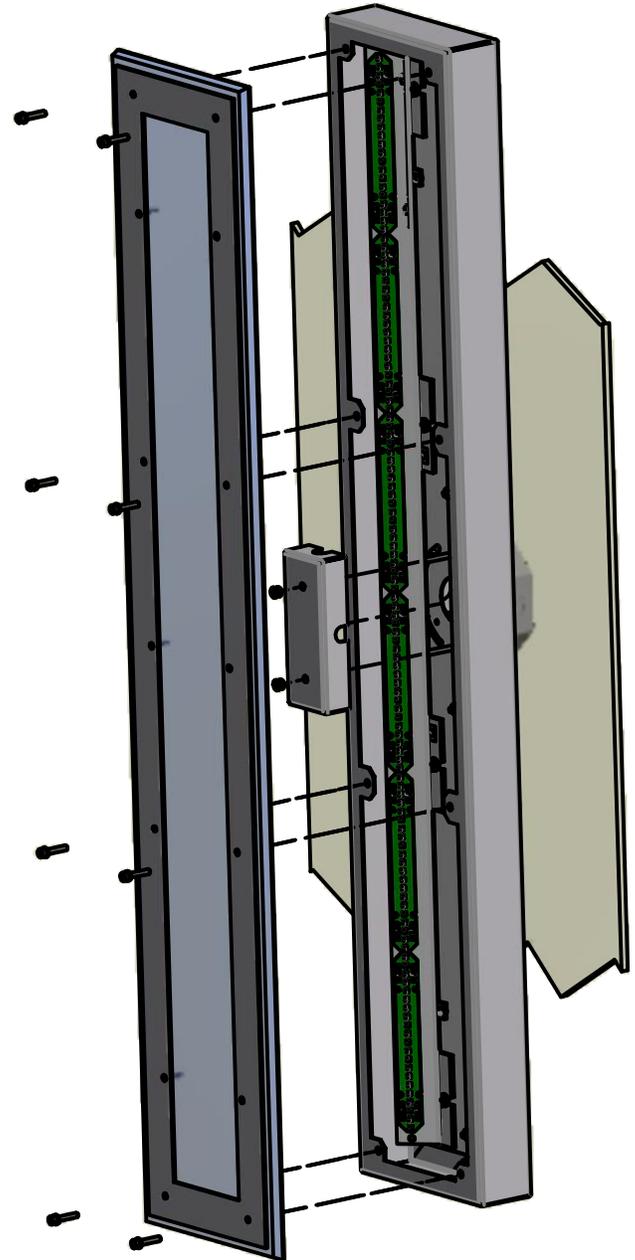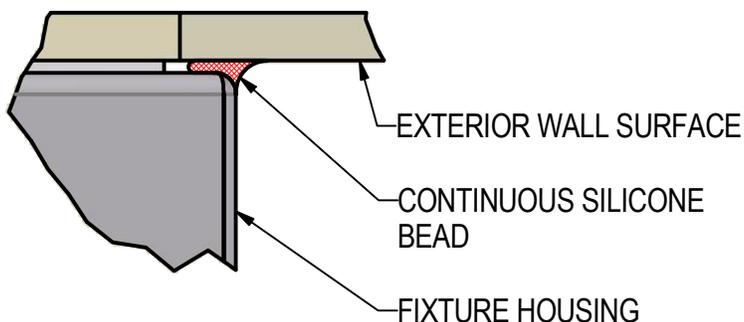

2/24/20
IS58920X