

# IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

**WARNING:** Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.



**CAUTION:** When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save

for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

## ADA WALL SCONCE INSTALLATION

1. SECURE BACKPLATE TO JUNCTION BOX (SCREWS BY OTHERS). AUXILIARY MOUNTING HOLES ARE PROVIDED IF NEEDED.
2. HANG WIRE BODY ON LOWER BACKPLATE STUDS TO SUPPORT FIXTURE WHILE WIRING.
3. **WIRE FIXTURE PER CODE**, SEE EMERGENCY INSTRUCTIONS, IF APPLICABLE.
4. SECURE WIRE BODY OVER BACKPLATE STUDS WITH (4) NUTS (PROVIDED) ENSURING PROPER SLOT ORIENTATION (SEE DETAIL A)
5. INSTALL LAMPS USING TWIST AND LOCK LAMP HOLDERS.
6. SLIDE FACE SHIELD INTO SLOTS OF WIRE BODY UNTIL FLUSH W/ WALL SURFACE.
7. TIGHTEN FACE SHIELD NUTS ON SIDE PLATES UNTIL FACE SHIELD IS SECURE TO WIRE BODY.
8. **OPTIONAL:** SECURE TOP AND/OR BOTTOM LENSES TO WIRE BODY WITH PROVIDED SCREWS.

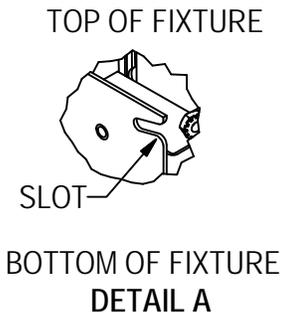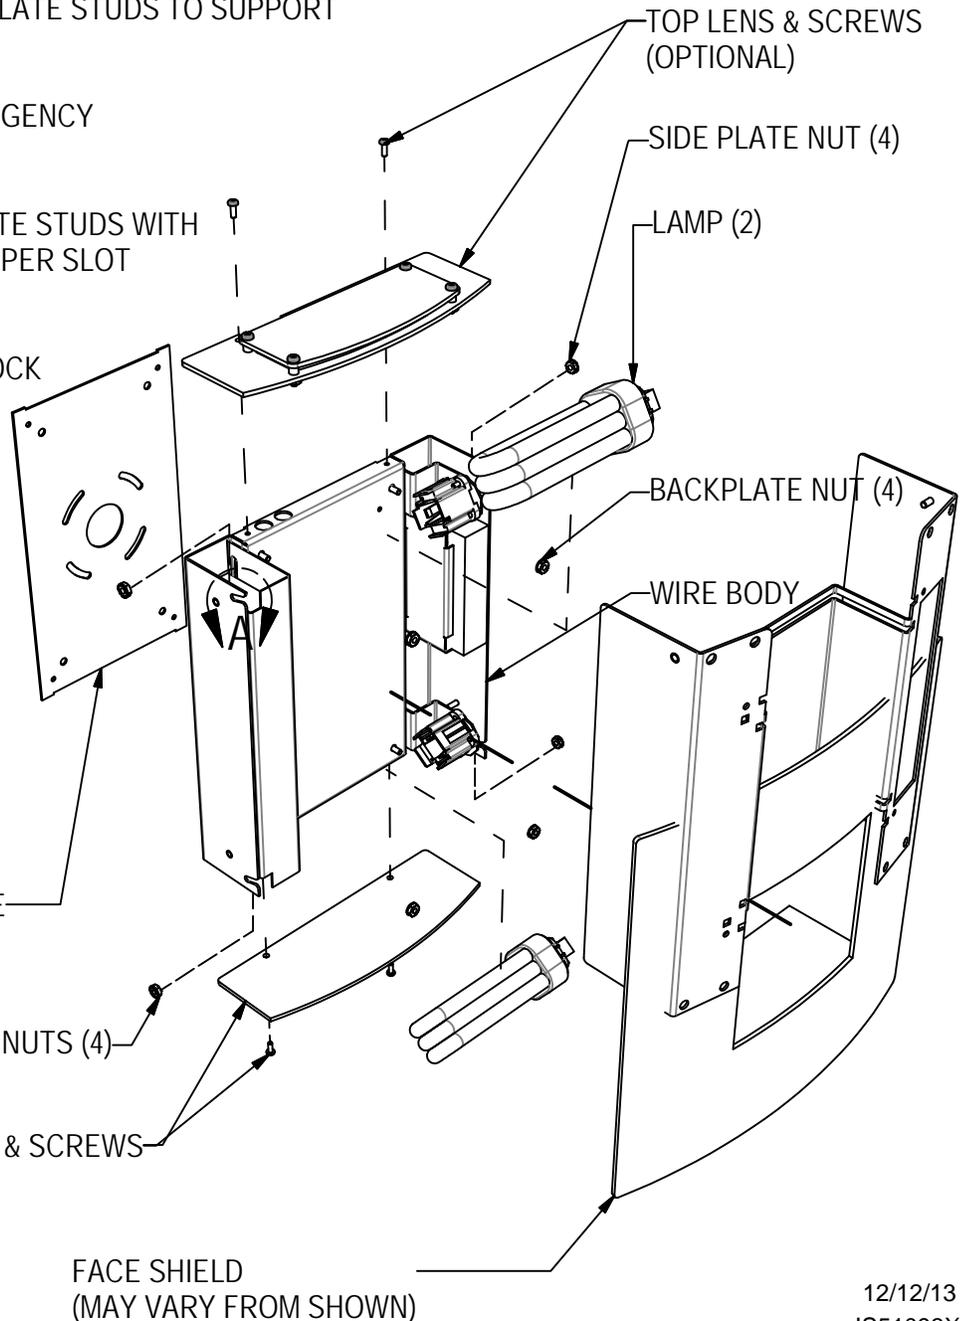

12/12/13  
IS51093X