

IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS


WARNING: Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

CAUTION: When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save

for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

WET LOCATION SEBRING

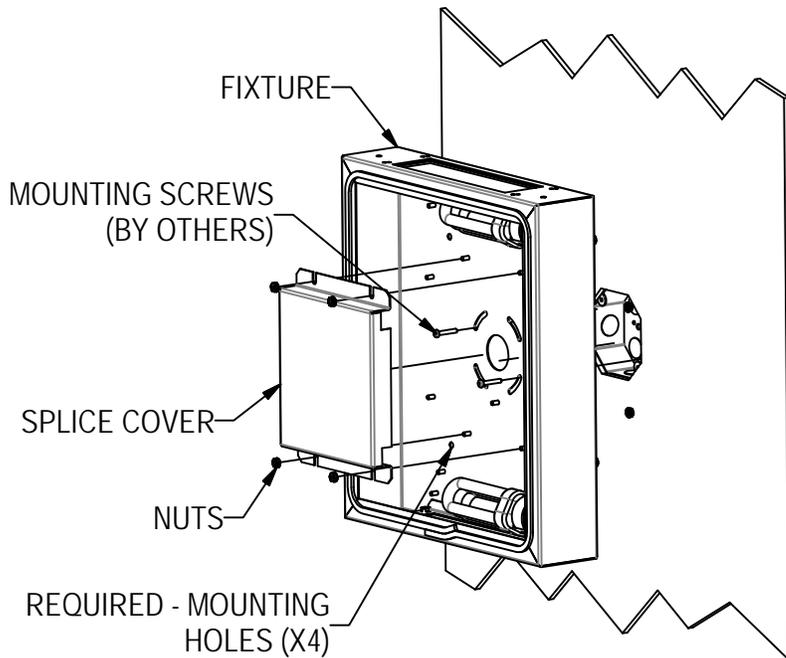

1. REMOVE (4) FOUR NUTS AND SPLICE COVER TO MOUNT FIXTURE TO J-BOX, WITH HARDWARE (BY OTHERS).

2. ANCHOR FIXTURE TO WALL WITH HARDWARE (BY OTHERS) AT PROVIDED FOUR HOLES IN BACK PLATE. FIXTURE MUST BE TIGHT TO WALL.


3. MAKE WIRE CONNECTIONS PER CODE.

4. PUSH WIRES SPLICES THROUGH HOLE INTO J-BOX.

5. RE-INSTALL SPLICE BOX, COVERING ALL SPLICES.

6. ONCE FIXTURE IS INSTALLED, APPLY A GENEROUS SEAL OF RTV (OR EQUIVALENT) AROUND ENTIRE PERIMETER OF FIXTURE ONLY. (MUST BE DONE BEFORE COVER IS INSTALLED).

7. AFTER RTV (OR EQUIVALENT) HAS CURED, INSTALL COVER. SECURE COVER WITH FOUR COVER SCREWS SUPPLIED.

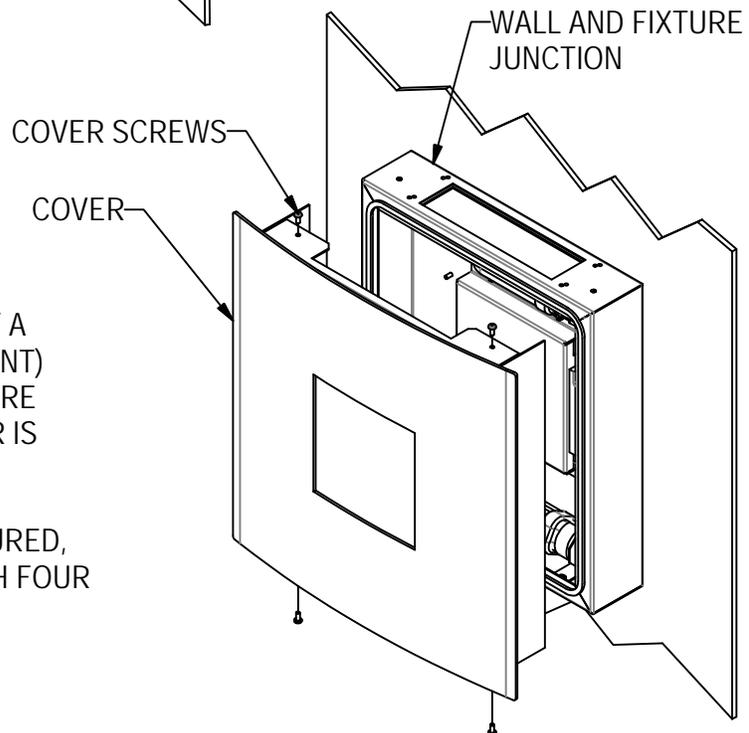

12/13/13
(REV1)

IS54138X