

IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS


WARNING: Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

CAUTION: When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save

for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

AUXILIARY MOUNTING INSTRUCTIONS

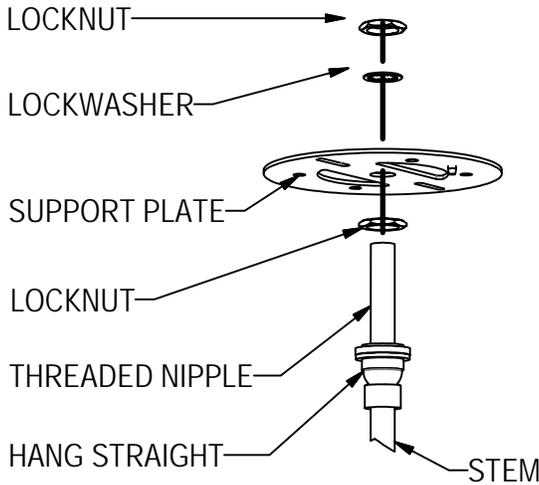

1. LOOSEN KNURLED NUT FROM HANGSTRAIGHT AND SLIDE KNURLED NUT AND CANOPY DOWN STEM.
2. FEED LEAD WIRES THROUGH THREADED PIPE NIPPLE AND THEN SECURE NIPPLE TO HANGSTRAIGHT AND STEM SO PIPE NIPPLE IS THREADED INTO THE HANGSTRAIGHT APPROXIMATELY A HALF AN INCH.

3. FEED THE LEAD WIRES AND PIPE NIPPLE THROUGH THE FIRST LOCKNUT AND THE CENTER HOLE OF THE SUPPORT PLATE.

NOTE: SPACING OF THE SUPPORT PLATE WILL BE DETERMINED BY THE DEPTH OF SUPPLIED CANOPY.


4. FEED THE LOCKWASHER AND SECOND LOCKNUT ONTO THE PIPE NIPPLE AND TIGHTEN UNTIL THE SUPPORT PLATE IS SECURE BETWEEN THE NUTS.

5. MAKE ELECTRICAL CONNECTIONS (PER CODE).


6. SECURE THE SUPPORT PLATE TO J-BOX W/ TWO SCREWS (SUPPLIED BY OTHER) THROUGH TWO OF THE FOUR HOLES.

7. SECURE THE SUPPORT PLATE TO THE BLOCKING (SUPPLIED BY OTHER) WITH TWO SCREWS (SUPPLIED BY OTHER) THROUGH THE TWO SLOTS.

8. SLIDE THE CANOPY AND KNURLED NUT UP OVER THE HANGSTRAIGHT AND TIGHTEN UNTIL CANOPY IS SECURE.

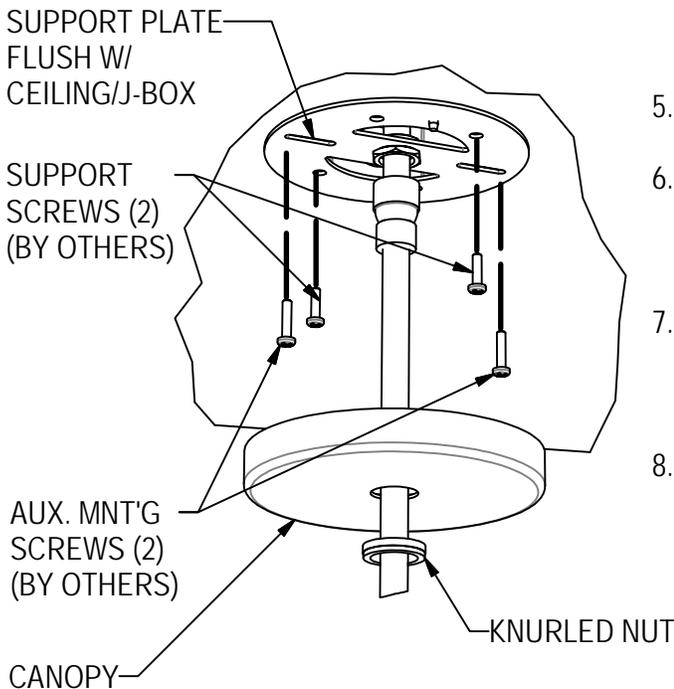

AUXILIARY SUPPORT
BLOCKING (BY OTHERS)

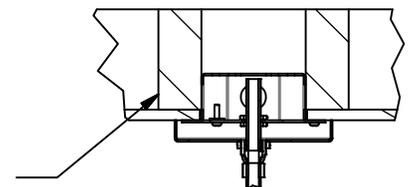

12/18/13
IS48570X