

IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS


WARNING: Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

CAUTION: When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save


for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

MULTI-STEM ASSEMBLY

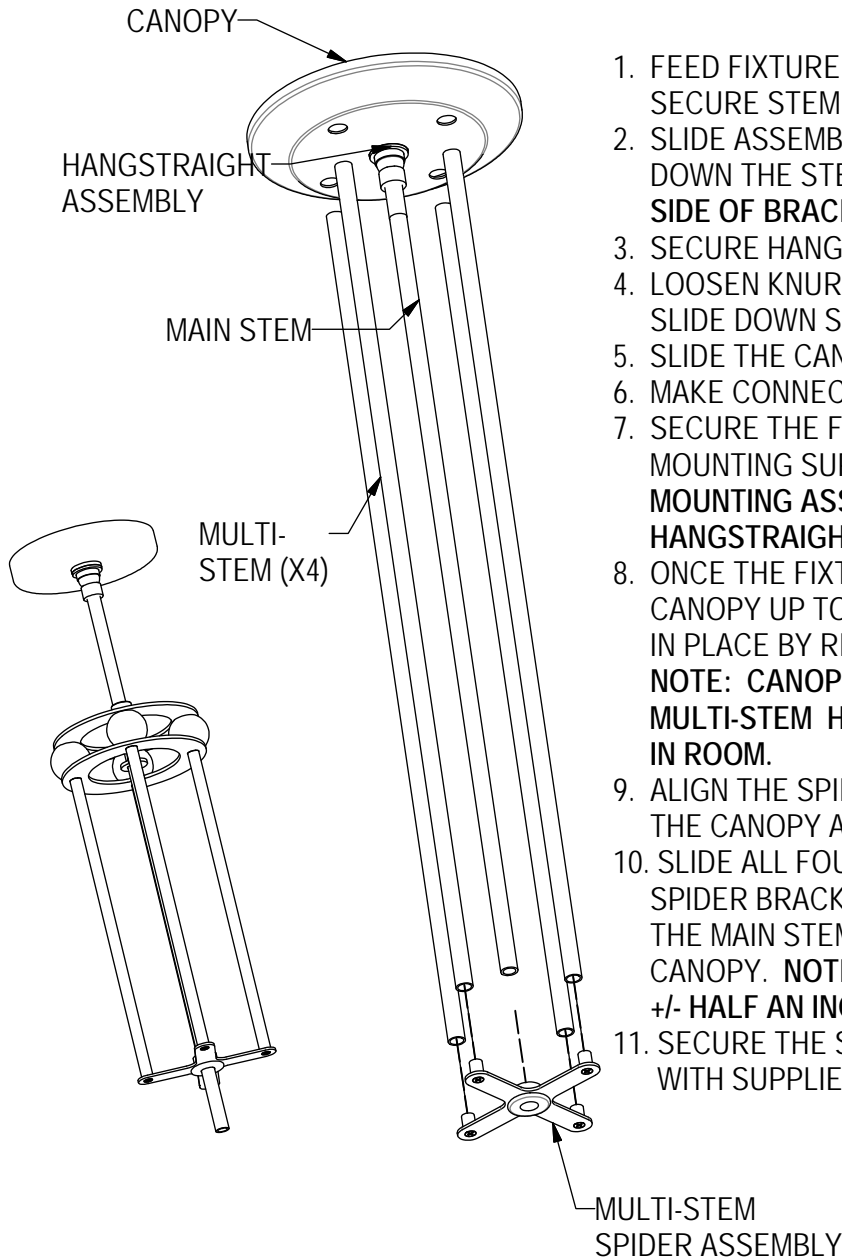

1. FEED FIXTURE WIRES THROUGH MAIN STEM AND TIGHTLY SECURE STEM TO FIXTURE.
2. SLIDE ASSEMBLED MULTI-STEM SPIDER BRACKET OVER AND DOWN THE STEM. **NOTE: FOUR STAND-OFFS MUST BE ON TOP SIDE OF BRACKET.**
3. SECURE HANGSTRAIGHT ASSEMBLY TO THE END OF MAIN STEM.
4. LOOSEN KNURLED NUT FROM HANGSTRAIGHT ASSEMBLY AND SLIDE DOWN STEM.
5. SLIDE THE CANOPY OVER HANGSTRAIGHT AND STEM.
6. MAKE CONNECTIONS PER CODE.
7. SECURE THE FIXTURE TO THE CEILING J-BOX AND AUXILIARY MOUNTING SUPPORT STRUCTURE. **NOTE: SEE AUXILIARY MOUNTING ASSEMBLY INSTRUCTIONS FOR ASSEMBLY OF HANGSTRAIGHT COMPONENTS TO SUPPORT BRACKET.**
8. ONCE THE FIXTURE IS SECURE TO THE CEILING, SLIDE THE CANOPY UP TO COVER THE J-BOX AND SECURE THE CANOPY IN PLACE BY RETIGHTENING KNURLED NUT TO HANGSTRAIGHT. **NOTE: CANOPY MAY NEED TO BE ADJUSTED TO LINE UP MULTI-STEM HOLES TO DESIRED ORIENTATION OF MULTI-STEMS IN ROOM.**
9. ALIGN THE SPIDER BRACKET STAND-OFFS WITH THE HOLES IN THE CANOPY ABOVE.
10. SLIDE ALL FOUR MULTI-STEMS OVER THE STAND-OFFS ON THE SPIDER BRACKET & SLIDE MULTI-STEM ASSEMBLY UP ALONG THE MAIN STEM UNTIL MULTI-STEMS ENGAGE THE HOLES IN THE CANOPY. **NOTE: MULTI-STEMS SHOULD ENGAGE THE CANOPY +/- HALF AN INCH.**
11. SECURE THE SPIDER BRACKET ASSEMBLY TO THE MAIN STEM WITH SUPPLIED SET SCREW.

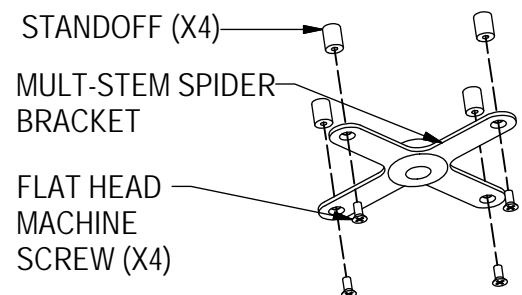

12/30/13
IS46200X