

IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

WARNING: Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

CAUTION: When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save


for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

STYK MCS - 2" MINI CANOPY MOUNT (WET LISTED)

DRILL 3/8" DIAMETER HOLE FOR WIRE ROUTING

NOTE: HOLE ONLY NEEDED ON SIDE WHERE WIRES EXIT

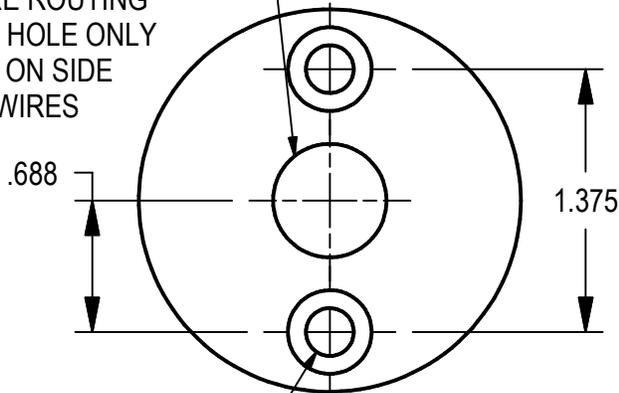


PRE-DRILL HOLES FOR CONCRETE SCREW (BY OTHERS). SCREW NOT TO EXCEED 3/16" CONCRETE SCREW

PREPARE WALL

INSTALLATION:

1. FEED WIRES THROUGH STEM, CANOPY AND MOUNTING BASE AS SHOWN.
2. ATTACH STEM TO FIXTURE HUB. HAND TIGHTEN.
3. SLIDE CANOPY ONTO STEM, AND ATTACH MOUNTING HUB TO OTHER END OF STEM AS SHOWN. BE SURE TO ALIGN MOUNTING HOLES VERTICALLY.
4. FEED WIRES INTO CENTER HOLE AND ROUTE TO J-BOX, LOCATED PER CODE AND BY OTHERS.
5. FILL MOUNTING HOLES IN BASE WITH SILICONE BEFORE INSTALLING HARDWARE. PLACE FOAM GASKET BETWEEN MOUNTING BASE AND WALL. SECURE MOUNTING BASE TO WALL WITH HARDWARE (BY OTHERS).
6. SECURE CANOPY BY TREADING ONTO THE MOUNTING BASE.
7. APPLY A BEAD OF SILICONE AROUND ENTIRE CANOPY COVER AFTER COMPLETELY INSTALLED.

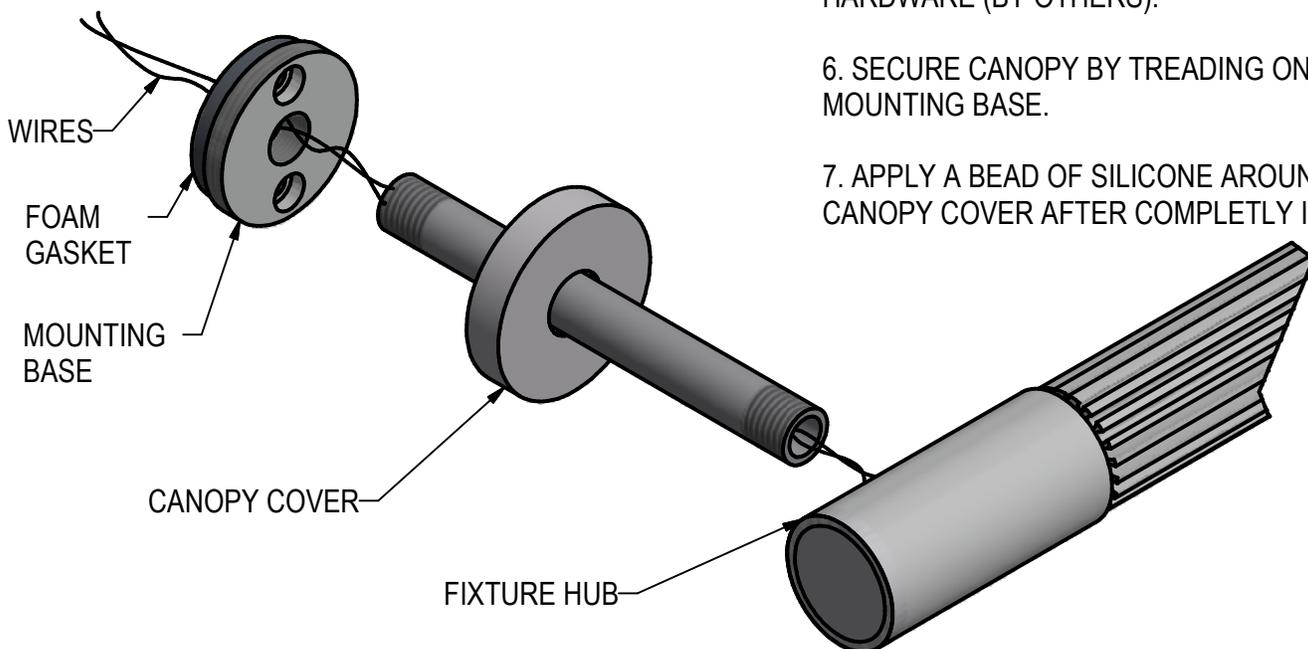

6/8/23
IS70192X