

# IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

**WARNING:** Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

**CAUTION:** When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save

for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.



These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

## SQUARE CANOPY MOUNT

### INSTALLATION:

1. UN-SNAP CANOPY COVER TO GAIN ACCESS TO MOUNTING HOLES.
2. MOUNT CANOPY TO J-BOX WITH SCREWS (BY OTHERS.) IF NEEDED, AUXILIARY MOUNTING HOLES CAN BE USED TO MOUNT INDEPENDENTLY OF THE J-BOX.
3. INSERT AIRCRAFT CABLE INTO CABLE GRIPPERS AND ADJUST TO DESIRED FIXTURE SUSPENSION HEIGHT. LEVEL FIXTURE.
4. FEED POWER CORD THROUGH HOLE IN CANOPY COVER AND THROUGH MOUNTING PLATE. TRIM CORD TO DESIRED LENGTH AND STRIP WIRES. ATTACH SUPPLIED STRAIN RELIEF TO CORD.

(CONTINUED ON PAGE 2)

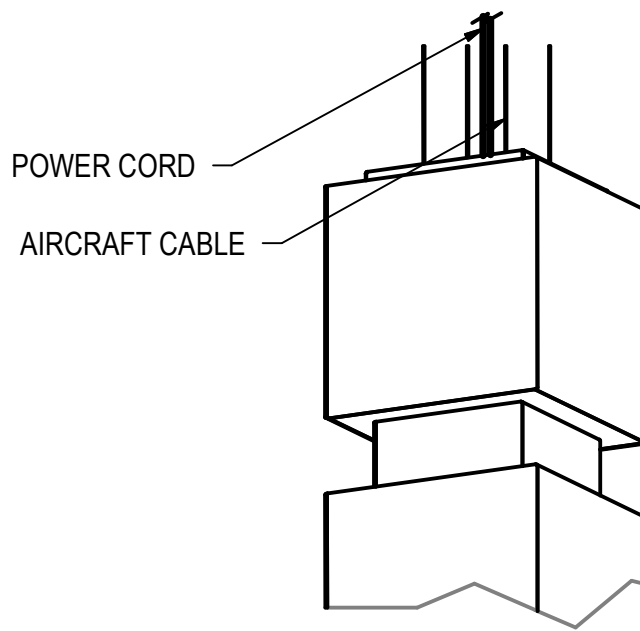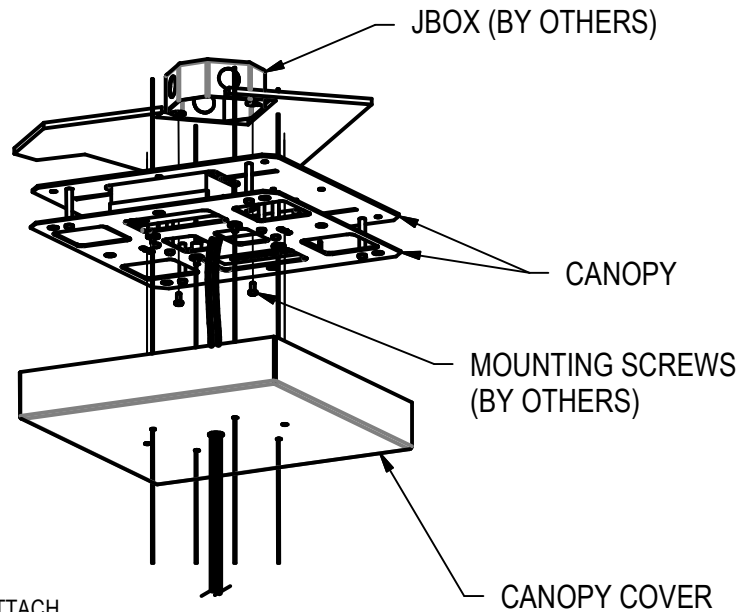

PAGE 1

03/05/2020

IS105724X

# IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS


**WARNING:** Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

**CAUTION:** When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save

for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

## SQUARE CANOPY MOUNT

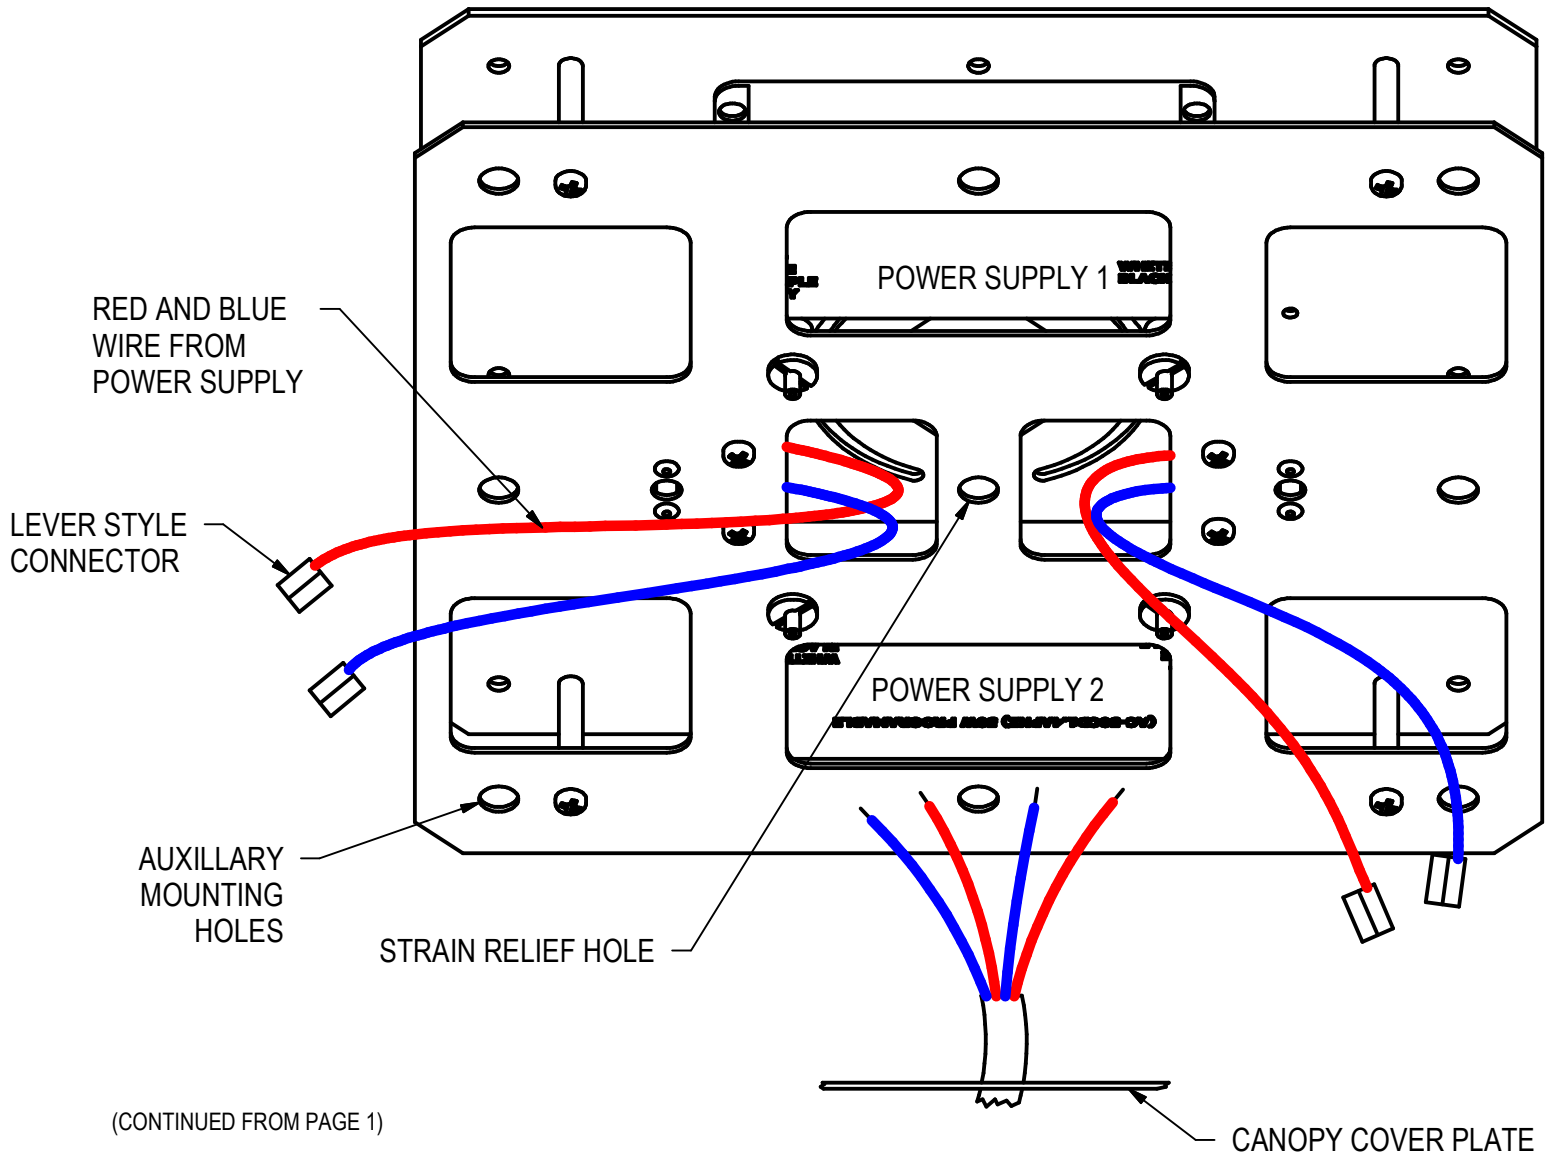

(CONTINUED FROM PAGE 1)

5. USING THE SUPPLIED LEVER CONNECTOR, CONNECT RED (POS +) AND BLUE (NEG -) PAIRS OF WIRES FROM THE POWER CORD TO THE RED (POS +) AND BLUE (NEG -) WIRES OF THE POWER SUPPLIES. THE POLARITY OF THE CORD WIRES, (POS +) OR (NEG -), MUST MATCH THE POLARITY OF THE POWER SUPPLY WIRES. WIRES IDENTIFIED WITH THE SAME TRACER STRIPE MUST BE ATTACHED TO THE SAME POWER SUPPLY. IN SINGLE SUPPLY VARIATIONS CONNECT BOTH PAIRS OF CORD WIRES TO THE POWER SUPPLY.

6. CONNECT THE HIGH VOLTAGE SUPPLY LEADS TO THE BRANCH CIRCUIT AND PUSH CONNECTIONS INTO J-BOX. WIRE OR CAP-OFF DIMMING LEADS IF APPLICABLE.

7. ALIGN CANOPY COVER TO AIRCRAFT CABLES AND SNAP ONTO CANOPY.

PAGE 2

03/05/2020

IS105724X

# IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS






**WARNING:** Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

**CAUTION:** When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save

for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

## SQUARE CANOPY MOUNT

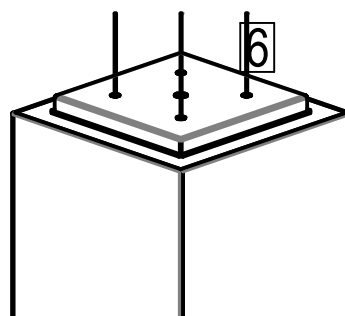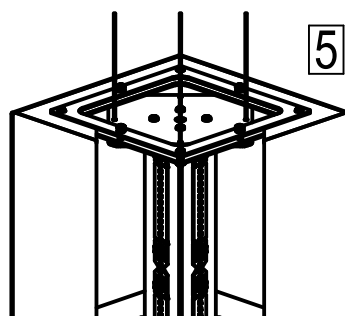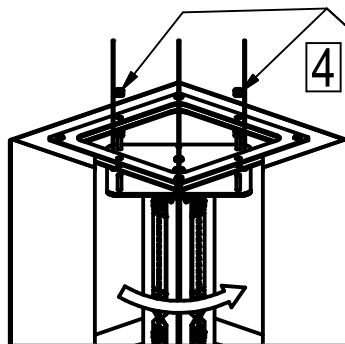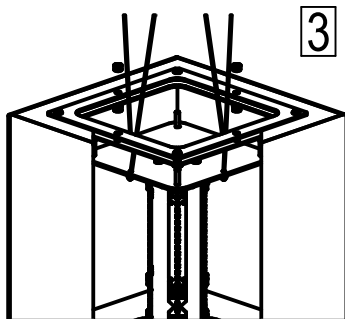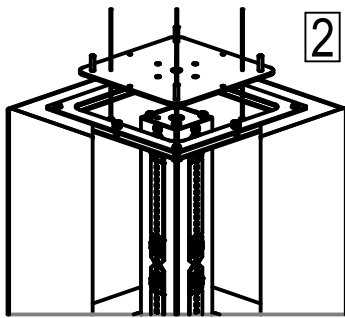

### INSTALLATION FOR SEPARATELY SHIPPED LED ENGINE AND HOUSING:

FOR BEST PRACTICE, INSTALL AFTER HANGING

1. ENSURE THAT BOTH THE LED FIXTURE AND CUBE HOUSING ARE POSITIONED VERTIALLY.
2. RAISE OFF THE CABLE COVER TO LOCATE THE SCREW ON THE MOUNTING PLATE.
3. SLIDE THE CUBES HOUSING UP AND OVER THE SQUARE MOUNTING PLATE.
4. ROTATE THE HOUSING 45° TO LINE UP THE SCREW HOLES WITH THE SCREWS LOCATED PREVIOUSLY ON THE MOUNTING PLATE.
5. LOWER THE HOUSING ONTO THE SCREWS AND TIGHTEN DOWN WITH THE FOUR (4) KNUIRLED BRASS COUPLINGS
6. LOWER THE CABLE COVER BACK ONTO THE TOP OF THE FIXTURE.

MOVE HOUSING UP AND OVER THE LED ENGINE AND MOUNTING PLATE

