

IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

WARNING: Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

CAUTION: When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save


for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

RECESSED WALL MOUNT - (REC)

INSTALLATION:

1. CONFIRM WHICH CUT OUT SIZE TO USE (SEE BOTTOM OF PAGE), CUT HOLE IN WALL.
2. MAKE ALL ELECTRICAL CONNECTIONS TO FIXTURE BOX PER CODE. KNOCK OUTS PROVIDED.
3. SLIDE FIXTURE BOX INTO CUT OUT. SECURE FIXTURE WITH REMODEL BRACKET BY TIGHTING THE BOLTS TO SECURE THE FIXTURE BOX TO WALL OR BOX CAN BE SECURED WITH BLOCKING AND SCREWS (SCREWS / BLOCKING BY OTHERS).
NOTE: FIXTURE FACE SHOULD COVER RECTANGULAR CUT-OUT COMPLETELY.
4. INSTALL POWER SUPPLY TO FIXTURE BOX USING SCREWS PROVIDED OR ADHESIVE TAPE FOUND ON POWER SUPPLY.
5. MAKE ALL ELECTRICAL CONNECTIONS TO POWER SUPPLY PER CODE.
6. WIRE FIXTURE TO POWER SUPPLY.
7. SECURE FACE PLATE TO FIXTURE BOX BY INSERTING THE FIXTURE ON TO GUIDES THEN SLIDING TO LOCK IN PLACE.

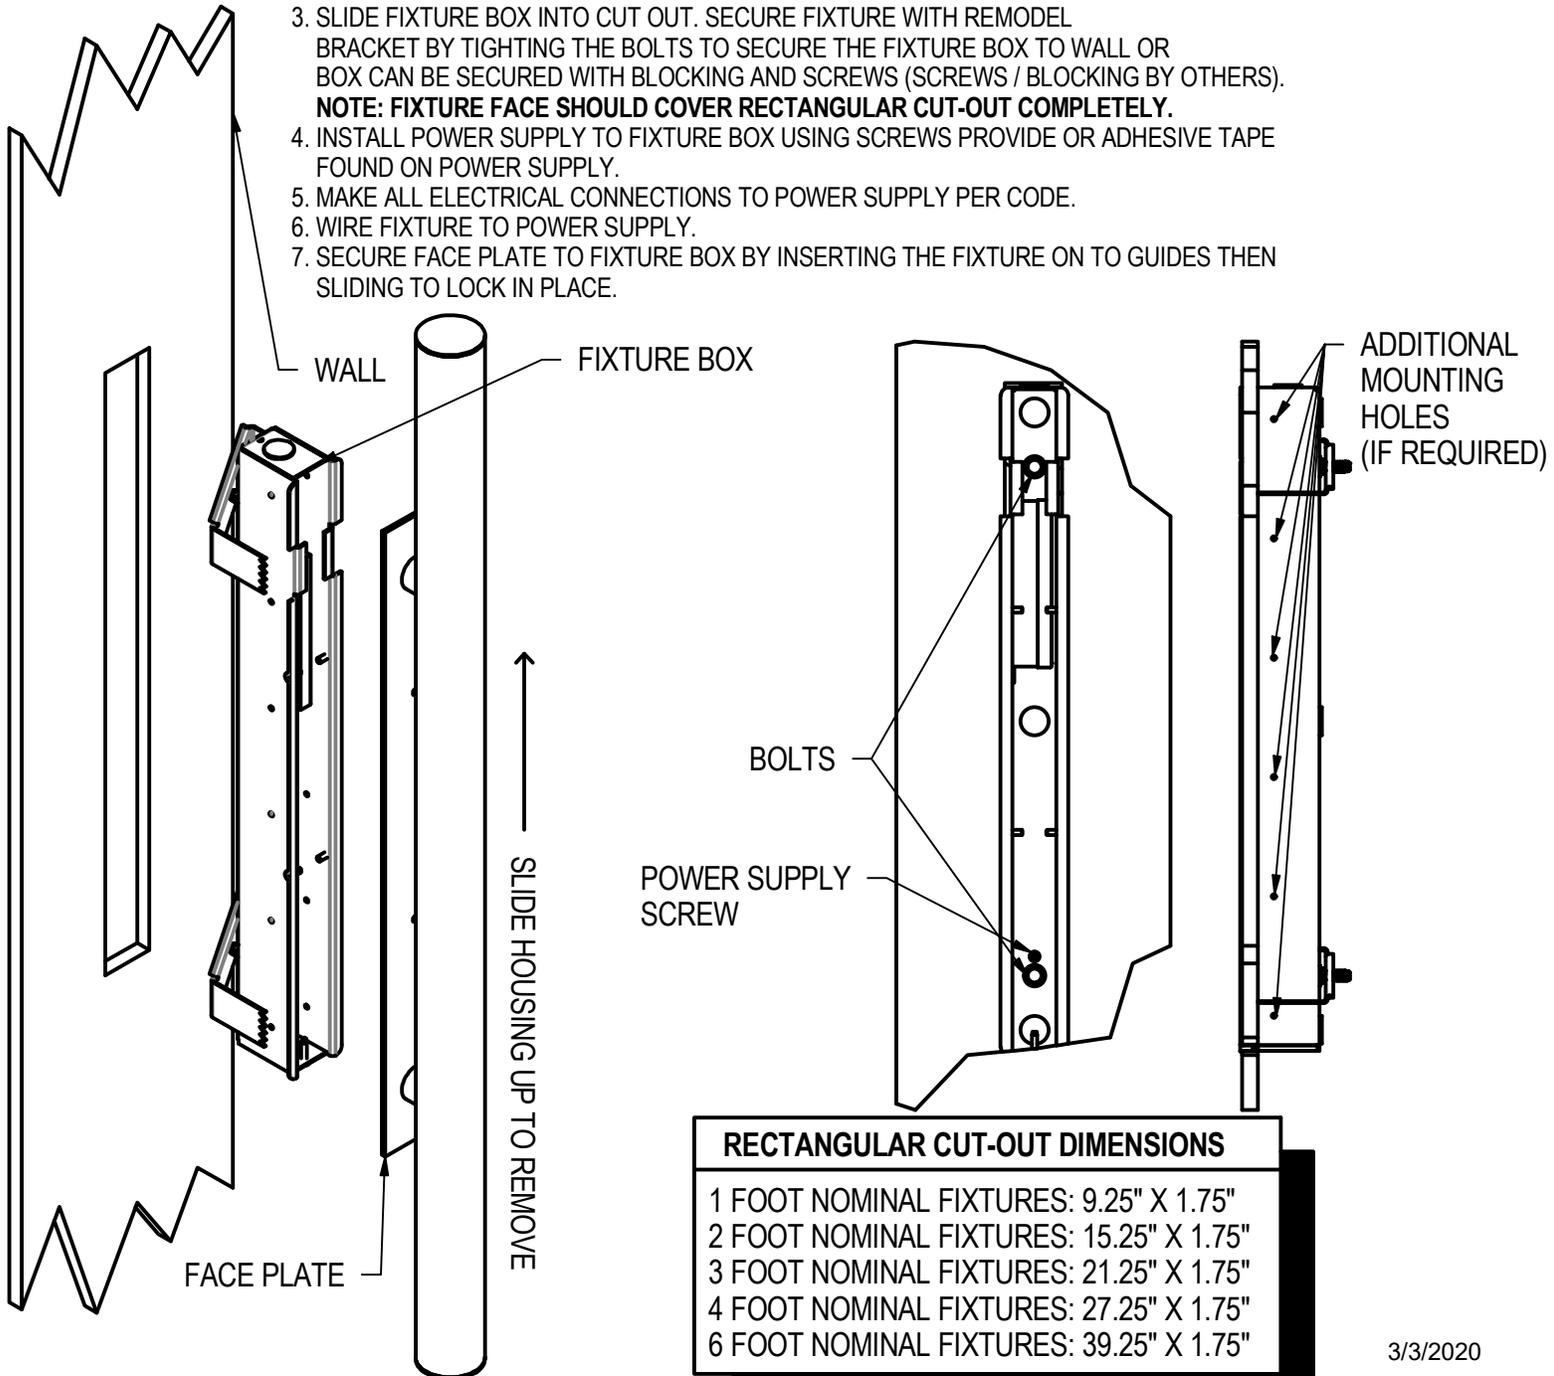

3/3/2020
IS106896X