

# IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

**WARNING:** Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

**CAUTION:** When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save



for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

## MINI CANOPY & STEM - (MCS)

### INSTALLATION:

1. DETERMINE THE LOCATION WHERE THE WIRES WILL PASS THROUGH THE WALL AND DRILL A 3/16" HOLE.
2. REMOVE TAPE BACKING LOCATED ON THE STEM MOUNTS.
3. USING FIXTURE TO LOCATE THE STEM MOUNT. PASS THE WIRE THROUGH THE 3/16" HOLE. WITH THE FIXTURE PRESS FIRMLY TO ADHEAR THE STEM MOUNT TO THE SURFACE.
4. LOOSEN STEM MOUNT SET SCREWS.
5. REMOVE FIXTURE FROM MOUNTING SURFACE AND SECURE STEM MOUNTS TO MOUNTING SURFACE (USING FASTENERS SUPPLIED BY OTHERS).
6. RE-INSTALL WIRES THROUGH STEM MOUNT & WALL.
7. SECURE FIXTURE TO STEM MOUNTS USING SUPPLIED SET SCREWS.
8. MAKE ALL ELECTRICAL CONNECTIONS TO REMOTE POWER SUPPLY PER CODE.
9. IF NEEDED, USE GOOF PLATES BETWEEN STEM MOUNTS & WALL.

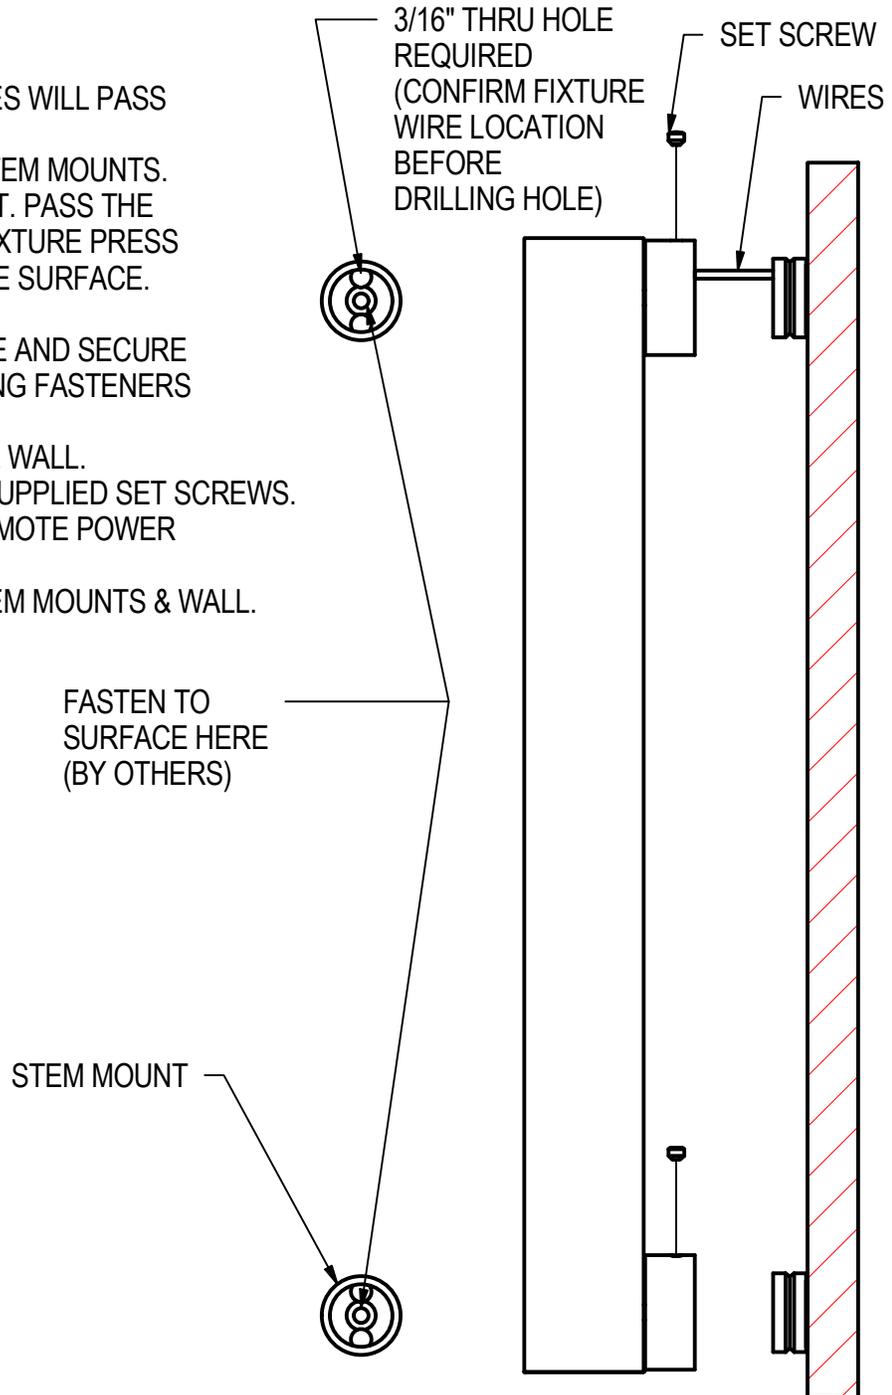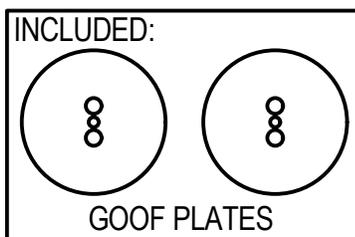

6/3/2020  
IS107911X