

# IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS




**WARNING:** Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

**CAUTION:** When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save

for future use. Make sure installation and all connections are in accordance with the National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that the power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

## ECHO DAMP / WET LOCATION YOK MOUNT

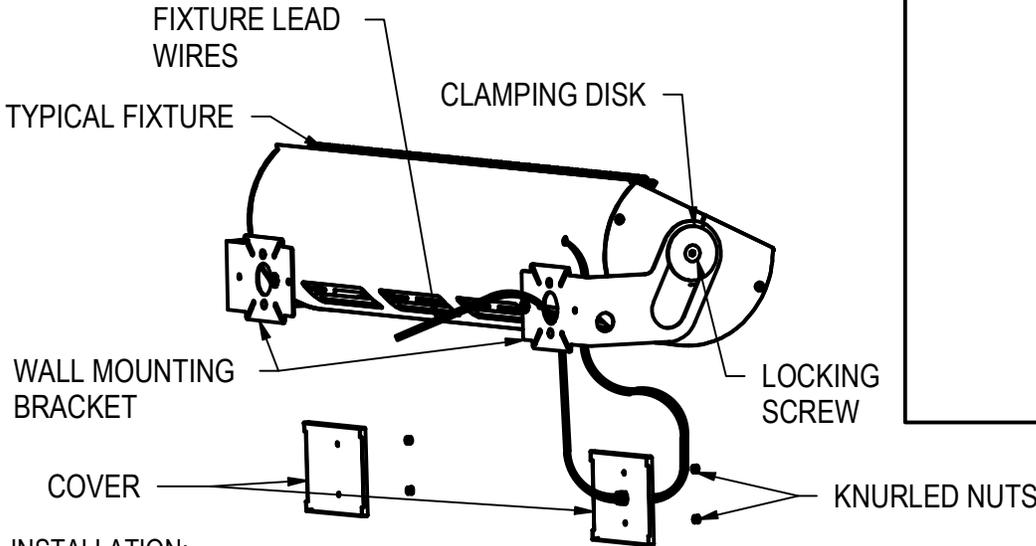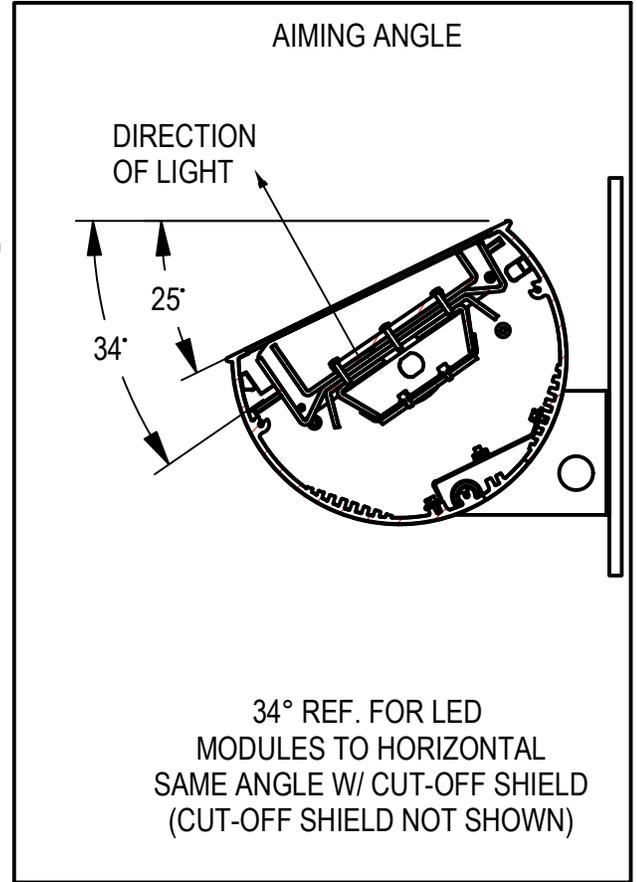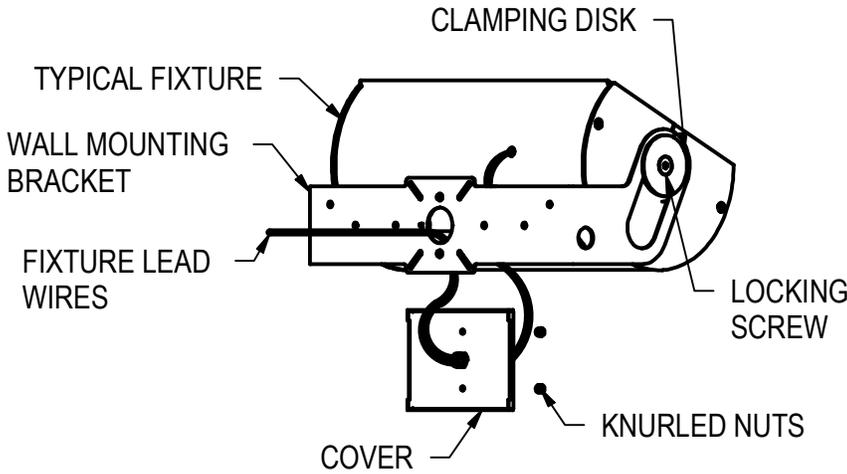

### INSTALLATION:

1. REMOVE FIXTURE FROM WALL MOUNTING BRACKET BY REMOVING LOCKING SCREWS AND CLAMPING DISKS.
2. REMOVE SPLICE COVER BY REMOVING NUTS.
3. USE WALL MOUNTING BRACKET AS A TEMPLATE TO LOCATE AUXILIARY MOUNTING SCREW LOCATIONS. ATTACH WALL MOUNTING BRACKET EARS TO JUNCTION BOX WITH SCREWS (BY OTHERS), FEED SUPPLY LEAD WIRES THROUGH CENTER, LEVEL FIXTURE, AND INSTALL AUXILIARY SCREWS (BY OTHERS).
4. CONNECT FIXTURE LEAD WIRES TO SUPPLY WIRES WITH WIRE NUTS (BY OTHERS). FEED CONNECTIONS INTO JUNCTION BOX.
5. INSTALL SPLICE COVER WITH NUTS. INSTALL FIXTURE TO WALL MOUNTING WITH SCREWS AND CLAMPING DISKS.
6. FIXTURE HAS INDICATOR MARKING ON HOUSING AND WALL MOUNTING BRACKET WHICH PROVIDES OPTIMUM AIMING ANGLE.

FOR CUSTOM AIMING, LOOSEN LOCKING SCREWS, AIM FIXTURE, AND LOCK IN PLACE WITH LOCKING SCREWS.

5/13/21

IS110266X