

# IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

**WARNING:** Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.

**CAUTION:** When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save




for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that the power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.

These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

## PAVO ARRAY INSTALLATION INSTRUCTIONS - CORD

### INSTALLATION STEPS:

1. REMOVE CANOPY COVER BY REMOVING #8-32 SCREWS.
2. SECURE MOUNT PLATE TO STRUCTURE USING SCREWS (BY OTHERS) AND SECONDARY MOUNT HOLES ON OUTSIDE OF MOUNT PLATE.
3. PASS FIXTURE CORD THRU COVER HOLE, AND THEN THRU MOUNT BRACKET HOLE.
4. LOOP CORD THRU KWIK CLAMP STRAIN RELIEF. KWIK CLAMP SITS ON INSIDE OF MOUNT BRACKET.
5. REPEAT FOR ALL REMAINING FIXTURES.
6. MAKE WIRING CONNECTIONS IN ACCORDANCE WITH STATE AND LOCAL CODES.
7. REINSTALL COVER TO MOUNT BRACKETS USING #8-32 SCREWS.

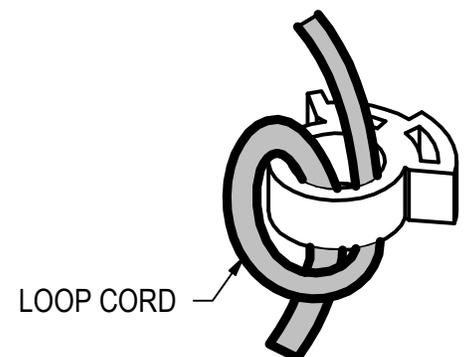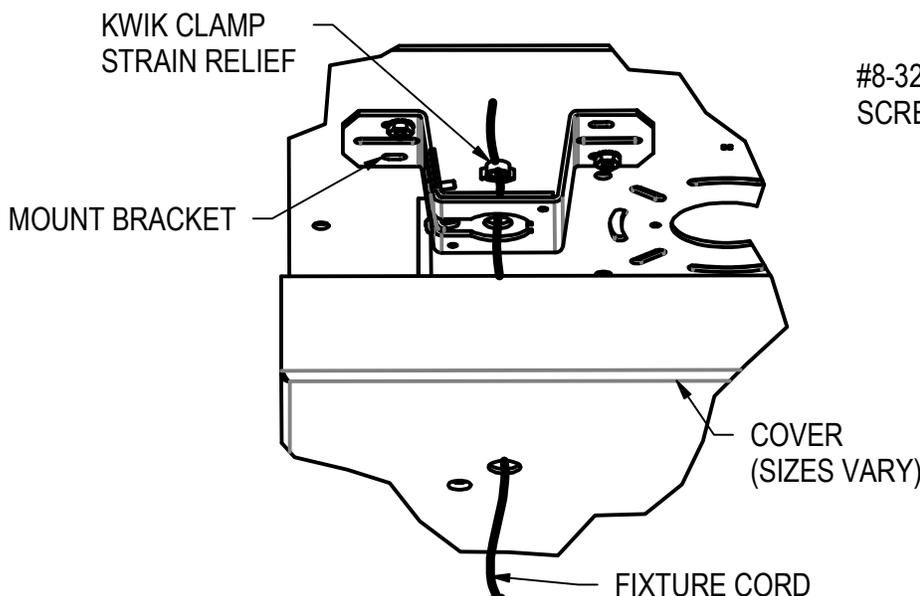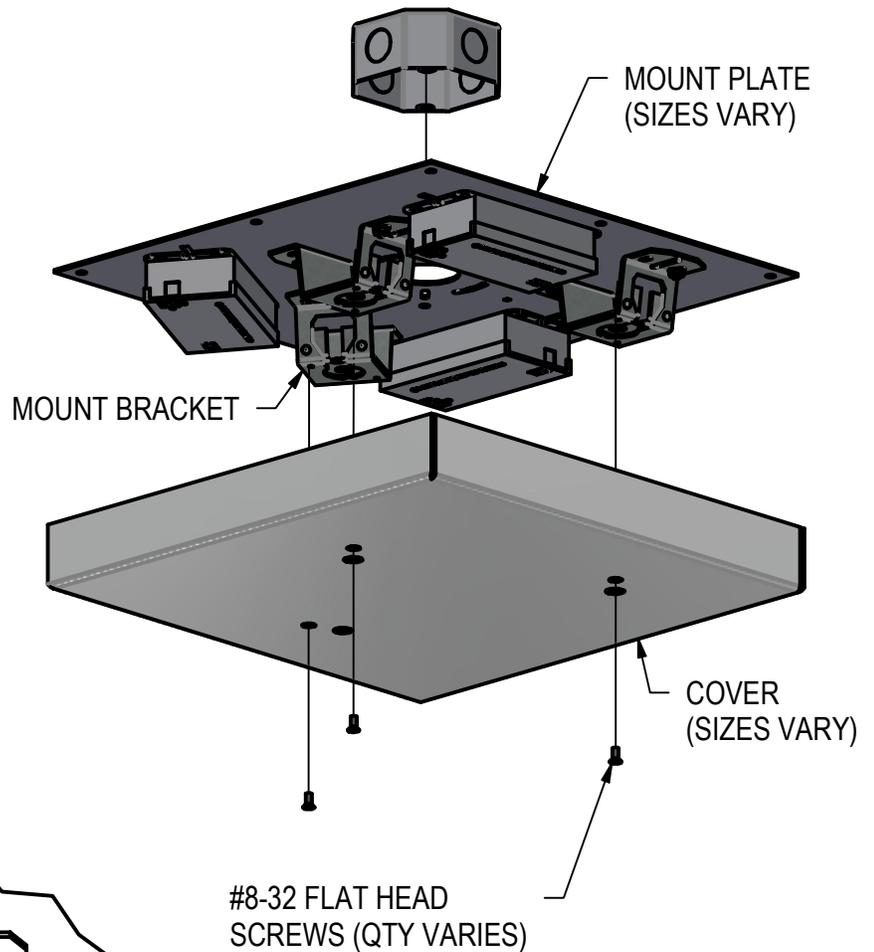

1/21/25  
IS119677X