

IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

WARNING: Risk of fire and electrical shock. This product is to be installed by a qualified electrician only.


CAUTION: When using electrical equipment, basic safety precautions should always be followed including the following: Read all instructions carefully before installation and save

for future use. Make sure installation and all connections are in accordance with National Electrical Code and any local regulations. To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture. Servicing should be performed by qualified service personnel.


These instructions do not claim to cover all details or variations. When additional information is desired, please contact your SPI representative.

EXTERIOR RECESSED WALL FIXTURE

NOTE: BLOCKING IS REQUIRED TO SUPPORT FIXTURE

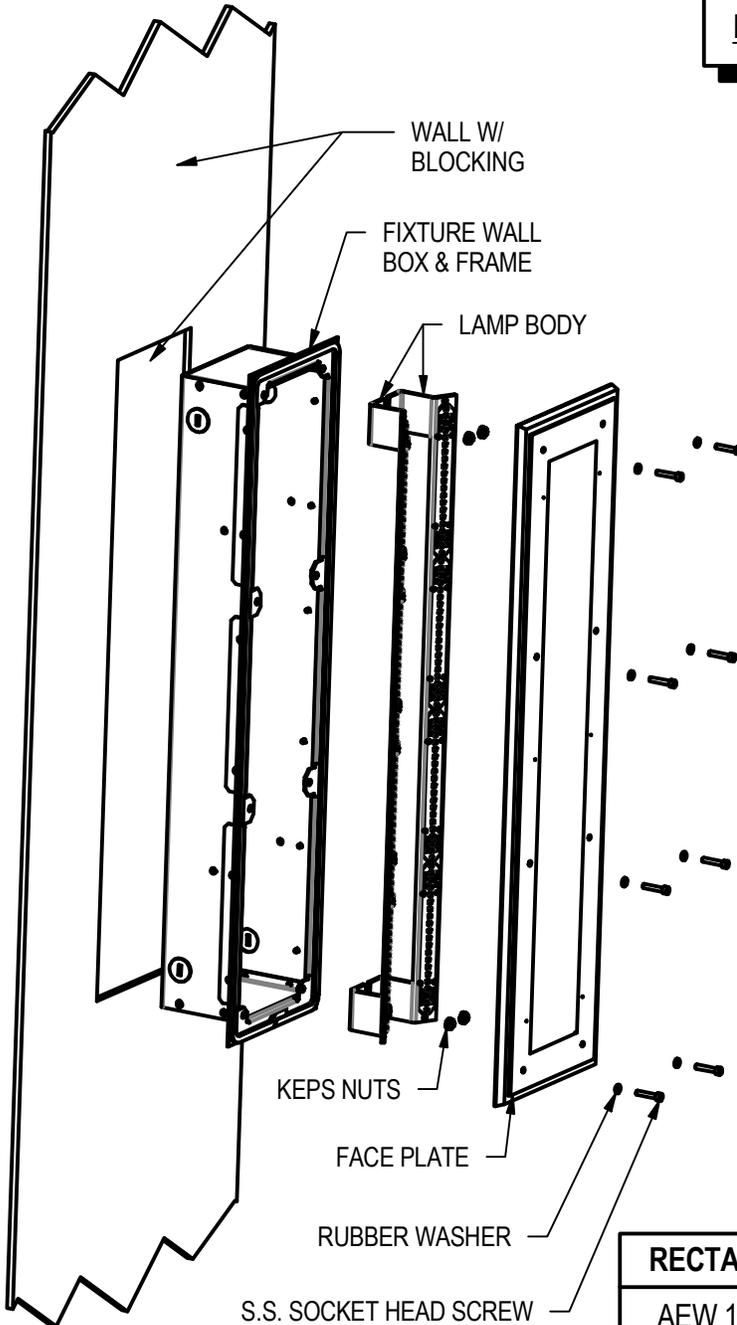

1. TURN POWER OFF
2. REMOVE FACE PLATE, (UNSCREW ALL SOCKET HEADS AT FACE PLATE) SET ASIDE. NOTE: KEEP RUBBER WASHER WITH SCREWS.
3. REMOVE LAMP BODY BY LOOSENING KEPS NUTS.
4. CONFIRM WHICH CUT OUT SIZE TO USE (SEE BOTTOM OF PAGE) CUT HOLE IN WALL
5. MAKE ELECTRICAL CONNECTIONS PER CODE.
6. RE-SECURE LAMP BODY TO FIXTURE WALL BOX.
7. SLIDE FIXTURE BOX INTO CUT OUT. SECURE TO BLOCKING (SCREWS / BLOCKING BY OTHERS). BE SURE ENDS OF GASKET AT WALL FLANGE ARE ORIENTED DOWN. **NOTE: FIXTURE FRAME SHOULD COVER CUT-OUT COMPLETELY.**
8. APPLY A CONTINUOUS "GENEROUS" BEAD OF SILICONE AT FIXTURE FRAME PERIMETER. SILICONE SHOULD NOT BUILD UP BEYOND FACE WALL FRAME. NOTE: IF EXTERIOR WALL IS NOT COMPLETELY FLAT, THE GAPS WILL NEED TO BE FILLED IN WITH SILICONE AS NEEDED. LET SILICONE DRY.

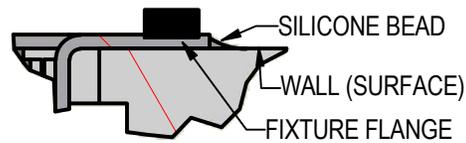

9. INSTALL LAMP, TURN POWER ON & TEST.
10. SECURE FACE PLATE TO FIXTURE BY RE-SCREWING ALL SOCKET HEAD SCREWS (& RUBBER WASHERS) **DO NOT OVER TIGHTEN**

RECTANGULAR CUT-OUT DIMENSIONS

AEW 10488 FIXTURES: 24.50" X 5.25"
AEW 10489 FIXTURES: 36.50" X 5.25"
AEW 10490 FIXTURES: 48.50" X 5.25"

MONET

SPILighting

REV 1 12/23/20
 2/20/20
 IS62071X

Tel (262)-242-1420 FAX: (262)-242- 6414

contact@spilighting.com